
LED SOLAR FLOOD LIGHT User Manual

Please take time to read this leaflet carefully and retain it for future reference.

Diagram:

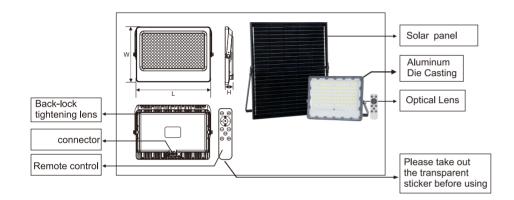

Specification:

| Lamp body | Power | 50W | 100W | 200W | 300W |
|---------------------------|-----------|-------------------|----------------|------------------|--------------------|
| | Lamp type | LED2835 | | | |
| | Size | 150.6x98.6x42.3mm | 192x132x40.8mm | 240x173.3x40.8mm | 271.5x198.3x40.8mm |
| Battery | Capacity | 5000mAH | 10000mAH | 20000mAH | 25000mAH |
| | Material | LiFePO4 Battery | | | |
| Solar Panel | Power | 5V/6W | 5V/15W | 5V/25W | 5V/30W |
| | Material | Monocrystalline | | | |
| | Size(mm) | 210x200x17mm | 390x235x17mm | 390x375x17mm | 390x450x17mm |
| Color temp | | 3000K/4000K/6000K | | | |
| CRI | | ≥75 | | | |
| Protection level(conform) | | IP65 | | | |
| Work temp | | -10°C ~ +45°C | | | |

50W 100W 200W 300W

- Charging time with solar irradiation is 5-8 hours, but there are many factors due to the processes of usage and region with customers.
- Discharge time, our mode is 100% brightness in the first hour, 80% brightness in the second hour, 60% brightness in the third hour, 50% brightness in the fourth hour, 30% brightness in the fifth to sixth hour. It will not be extinguished until dawn and switch to charging mode.
- Timing function: 3H, 5H, 8H
- Another mode is brightness adjustment mode, which is indicated on remote control.
- Another mode is brightness adjustment mode, which is indicated on remote cont
 Best effect, recommended use of "AUTO" automatic mode.
- Usually power on (installed) is defaulted to automatic mode.
- · Automatic mode: The brightness of the whole lamp can be adaptively controlled according to the battery's own power.

 
Important Safety Information

- · Do not dispose of battery in fire. This may result in an explosion.
- Do not expose the light to fire or intense heat as the battery may explode.
- Do not immerse in water.
- Never look directly into the light or shine it into another person's eyes.
- Follow proper safety tips to prevent from falling off a ladder.
- · Consult your local construction safty guide if needed for installing the light fixture on a building.

Fixing instructions


- The light fixture should be installed on a flat and stable surface.
- Avoid installing the light near an air conditioner, a central heater, or high voltage system.
- The solar charger board should be set in a sunny area where maximum sunlight can be collected. Typically, the solar board should face a direction (south) where sunlight can charge the board for at least 3 hours per day (5 hours per day if behind glass). It is suggested to charge the light for 24 hours before first use.
- Use a soft wet cloth to periodically (at least once a year) clean the charger board to avoid the reduction of power output due to accumulated dust.


Installation:



5-Fix the lamp body to the bracket

  
adjust the angle which you need.







3-Fixed the bracket and lamp body.

  6-Connect the wire of the solar panel to the wire of the lamp.





Remote control introduction

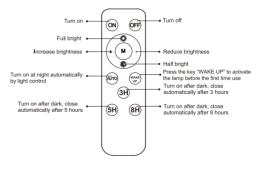


Quick Setup Procedure



1. Please keep it away from the children.

- 2. This product can installed for outdoor, but we
- suggest that against for the rain/storm & High lights.

 Note : Please bring the following tools





This product should be disposed of responsibly at the end of its life. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice (Waste Electrical and Electronic Equipment Directive)